


'Piranha Off Road products are not associated in any way with Toyota Australia or any of its related companies'

To Suit LANDCRUISER 200 SERIES
4.7L V8 TD



PART NUMBER	BT200V8D
APPROX FITTING TIME	2 Hours
MAX BATTERY SIZE	265mm L
MAX BATT WEIGHT	21Kg
CYCLE DUTY	with tube
TRAY LOCATION	PSR

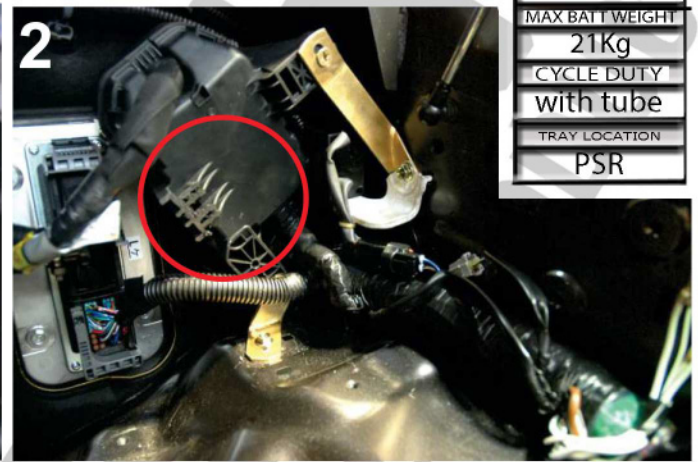

FITTING INSTRUCTIONS

This cradle fit passenger side rear.

Remove fuel cannister & mount, terminal box & computers.
 Longest leg on terminal box has to be cut off.
 Back corner of computer mount needs to be trimmed to fit around A/C pipe.
 Remove relay from inner guard.
 Place Conduit over fuel line from cannister.
 Bolt the computer mounts onto the inner guard, then bolt computer to mounts, then move into position & tighten all bolts.
 Bolt lower bracket on terminal box & bolt into position.
 Modify relay mounts & bolt into inner guard with terminal mount.
 Bolt terminal box to mount.
 Place tray into position & bolt base mounts with 4 x M6 Hex.
 Bolt mounts to inner guard using 3 x M8 short.
 Bolt cannister to mounts on tray using 2 x M8 long bolts & nuts
 Lengthen wiring to fuel cannister (2x Plugs)
 Once the battery is in place secure top mount using J Bolts & brace using M6 bolt, nut & washer

PARTS INCLUDED WITH TRAY

- 1 X Tray
- 2 X M8 Long
- 3 X M8 Short
- 2 X M8 Nut
- 11 X M6 Hex
- 1 X M6 Countersunk
- 1 X M6 Weld Bolt
- 5 X M6 Nut
- 1 X Special Top Mount
- 1 X Small M6 Washer
- 4 X Special Brackets
- 2 X Long J Bolt

RECOMMENDED ISOLATOR

DBE140SF
or
DBE180-SX

Ensure, before closing the bonnet that all items fitted have adequate clearance