'Piranha Off Road products are not associated in any way with Toyota Australia or any of its related companies'


## To Suit LANDCRUISER 80 SERIES 1HZD/1HDT/1HDFT TD









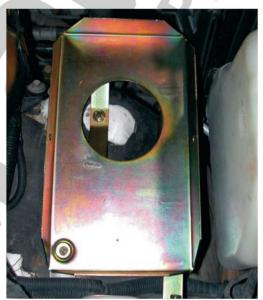

## PARTS INCLUDED WITH TRAY

- 1 X Tray
- 1 X M6 Bolt (Countersunk)
- 1 X M6 Nut
- 1 XM6 Body Washer
- 3 X M8 Bolt Long
- 1 X M8 Bolt Short
- 1 X Speciall top Mount
- 2 X J Bolts

## FITTING INSTRUCTIONS

The cradle fits drivers side front.

Bolts to existing capture nuts except one hole that will need drilling.

NOTE: Top mount must be used to ensure no rocking movement in battery. This tray can be used to replace original manufacturers cradle on some petrol vehicles.

Ensure, before closing the bonnet that all items fitted have adequate clearance

RECOMMENDED ISOLATOR

DBE140SF or DBE180-SX

Oct 2017