



# FITTING GUIDE

\*Piranha Off Road Products are not associated in any way with Toyota Australia or any of its related companies\*

DETAILS	
Part Number	<b>BTFJC15</b>
Approx. Fitting Time	1 Hour
Max Battery Size	265mm Long
Max Battery Weight	21Kg
Battery Type	Cycle Duty – NON AGM
Tray Location	DSF

## To Suit TOYOTA FJ Cruiser – V6 Petrol


PARTS INCLUDED WITH TRAY			
1	Tray	6	3 x M6 Whizlock Nuts
2	Special Top Mount / "J" Bolts	7	1 x M8 Body Washer
3	4 x M8 15mm C/Sunk Bolts	8	1 x M6 Small Washer
4	1 x M6 20mm C/Sunk Bolt	9	1 x Black Spacer Washer
5	3 x M6 15mm Bolts	10	1 x M6 Nyloc Nut

Recommended Isolator  
DBE140SF or DBE180-SX




### FITTING INSTRUCTIONS

1. Remove power steering reservoir & bracket.
2. Remove A/C pipe mount from guard. (Retain rubber mounting block for re-installing later)
3. Manipulate A/C pipe towards the engine to ensure there is no undue pressure or rubbing on other parts.
4. Re-install rubber A/C pipe mount to top of bracket on pipe using the black spacer washer supplied.
5. Place tray into position & align bolt holes, Bolt tray in using 4 x M8 C/Sunk bolts.
6. Re-attach rubber A/C pipe mount to tab on end of tray.
7. Cut legs off the power steering reservoir and trim base to 50mm x 25mm.  
(Refer Picture) Drill two 7mm holes through bracket & mount and mount to tab on tray using 2 x M6 bolts and whizlock nuts.

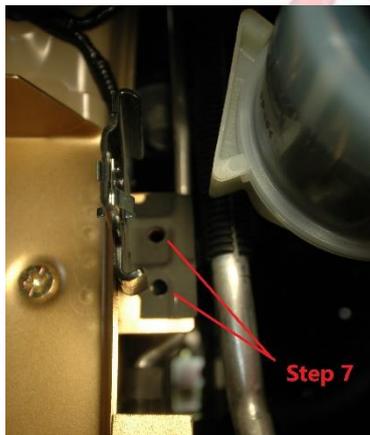

8. Re-mount power steering reservoir making sure there is adequate clearance on radiator hose and air cleaner housing. (Note: Dip stick may need to be bent slightly for easier access).

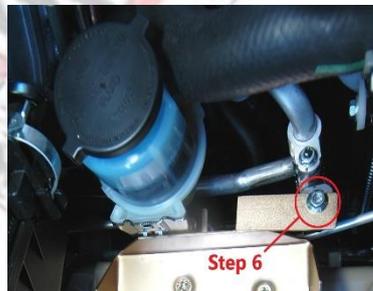

9. Place battery in vehicle fit special top mount with M6 nyloc nut on the "J" bolt closest to the air cleaner. Then drill radiator support panel and bolt top mount using M6 bolt, washer and whizlock nut.



**Please Note:** It is the installers responsibility to check all items have adequate clearance and are secured/protected against vibration, rubbing & chaffing.