
## PIRANHA OFFROAD PRODUCTS P/N

**BTH05** 

'Piranha Off Road products are not associated in any way with Toyota Australia or any of its related companies'

## To Suit TOYOTA HILUX 1KD-FTV 3.0L TDI V6 PETROL

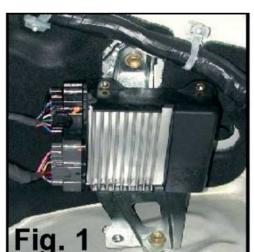







NOT SUITABLE For self fit







If relay for bull bar lights fitted, re-fit to computer bracket as above

## PARTS INCLUDED WITH TRAY

- 1 X Tray
- 1 X Computer Bracket
- 2 X 25x6mm Panel Washer
- 2 X J Bolt
- 1 X Special top Mount
- 1 X 30mm M6 Bolt
- 2 X Black Washer
- 2 X M6 Bolt Countersunk 25mm
- 6 X M6 20mm Bolt
- 4 X M6 Nuts
- 1 X Gold Spacer Washer

RECOMMENDED ISOLATOR

DBE140SF or DBE180-SX

## The cradle fits passenger side rear.

Unplug Diesel computer plugs and remove computer and bracket from vehicle.

Refit diesel computer to new mounting bracket using 3 x OE screws (Fig 1).

Bolt computer bracket to battery tray using 2 x M6 25mm counter sunk screws and wiz lock nuts (Fig. 1).

Place battery tray in position, line up with 3 x captive nuts and 2 x OE holes. Secure with nuts, bolts and washers (Fig 2).

Place battery onto tray and secure top mount to guard using longer bolt and black spacer washers

\*On 2010 onwards models, a spacer washer may be required under rear leg of tray.

Ensure, before closing the bonnet that all items fitted have adequate clearance

Oct 2017