

# PIRANHA OFFROAD PRODUCTS

'Piranha Off Road products are not associated in any way with FCA Australia Pty Ltd or any of its related companies'

## To Suit JEEP WRANGLER - JK

BTJWJK

PART NUMBER

BTJWJK

APPROX FITTING TIME

1.5 Hours

MAX BATTERY SIZE

OPTIMA D31A

RECOMMENDED TYPE

OPTIMA D31A

TRAY LOCATION

PS Cargo Area

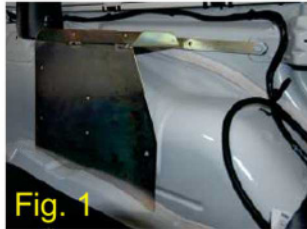


Fig. 1

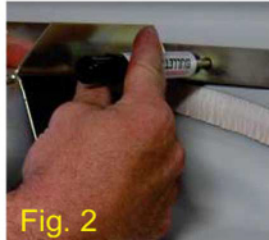


Fig. 2



Fig. 3



Fig. 4

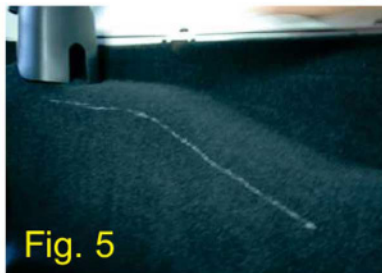


Fig. 5

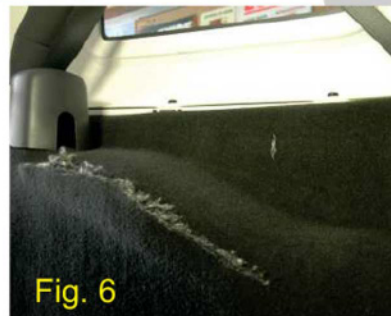


Fig. 6



Fig. 7



Fig. 8



Fig. 9



### PARTS INCLUDED WITH TRAY

- 1 X Tray
- 6 X M8 Long
- 3 X M8 Wizlock
- 3 X M8 Washers
- 3 X M8 Rivnut
- 1 X Standard Top Mount
- 2 X J Bolts

### RECOMMENDED ISOLATOR

DBE140SF  
or  
DBE180-SX

### FITTING INSTRUCTIONS

**The cradle fits passenger side cargo area**

**2 people will be needed to fit this tray**

1. Remove carpet from rear P.S. cargo area
2. Remove bolt and place tray in. Align bolt & tray along floor (See figure 1)
3. Mark off tray where holes will need to be drilled (See figure 2 & 3)
4. Drill: 3 bottom holes to 8mm  
2 top holes to 11mm  
Hole in upper arm to 11mm  
Then put rivnuts into upper arm & two top holes (see figure 4)
5. Place carpet into position & mark for cutting (See figures 5 & 6)
6. Cut out carpet where tray sits on inner guard (See figure 7)
7. Place tray in behind carpet & bolt in using M8 bolts in top 2 holes & arm (See figure 8)
8. Bolt lower 3 holes using M8 bolts, nuts & washers (See figure 9)
9. Make sure carpet is put back in properly, place in battery & secure with top mount

**ENSURE POSITIVE TERMINAL IS ADEQUATELY COVERED TO PREVENT SHORTING**  
**Ensure, Before closing the bonnet that all items fitted have adequate clearance**