

PIRANHA OFFROAD PRODUCTS

'Piranha Off Road products are not associated in any way with SUZUKI Australia Pty Ltd or any of its related companies'

To Suit SUZUKI SIERRA 1.0L Petrol




PART NUMBER	BTSS
APPROX FITTING TIME	1 Hour
MAX BATTERY SIZE	OPTIMA D34
RECOMMENDED TYPE	OPTIMA D34
TRAY LOCATION	PSR



Drill two 6mm holes through the fire wall, and fasten tray with M6 nuts and bolts.

Drill two 6mm holes into guard. Use M6 counter sunk bolts and nuts with body washers under the guard

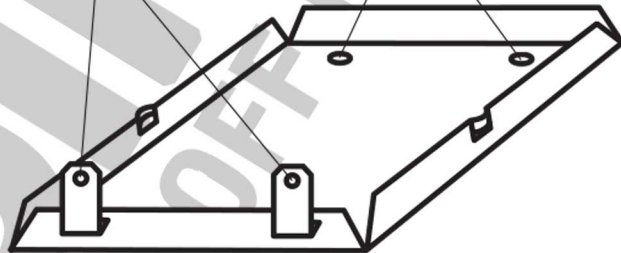

PARTS INCLUDED WITH TRAY

- 1 X Tray
- 2 X M6 Bolts
- 2 X M6 Bolts Countersunk
- 4 X M6 Nuts
- 2 X Body Washers
- 1 X Universal Top Mount
- 2 X J Bolts

RECOMMENDED ISOLATOR

DBE140SF
or
DBE180-SX

FITTING INSTRUCTIONS

The cradle fits passenger side rear.

The charcoal canister will need to be removed. Drill two 6mm holes through the fire wall for the two angle mounts. Use M6 bolts and nuts to fasten the two support braces onto the fire wall. The charcoal canister will need to be relocated first. Two holes have to be drilled into the lower guard, and fastened with M6 counter sunk bolts using nuts and body washers.

(Note: be careful of interior furnishings).

Ensure, Before closing the bonnet that all items fitted have adequate clearance