'Piranha Off Road products are not associated in any way with JAGUAR LAND ROVER Ltd or any of its related companies'

## To Suit DISCOVERY TD6 V6 and Turbo Diesel ALSO FITS RANGE ROVER SPORT
















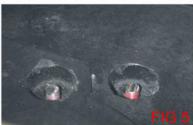

## PARTS INCLUDED WITH TRAY

- 1 X Tray
- 2 X M8 Post Screws
- 1 X Universal Top Mount
- 2 X J Bolts

## FITTING INSTRUCTIONS

The cradle fits drivers side rear, beside power booster under cover.

- 1.Remove plastic cover from power booster/ABS Unit.
- 2.Remove 2 X12mm Hex head nuts from centre of base, place tray into position ,mark where flutes require grinding down. Remove tray and now grind down flutes (Fig 1).
- 3. Secure tray in position using 2 XM8 nuts . (Fig2)& (Fig5)
- 4. Position battery and secure with top mount.
- 5. Battery management unit can be mounted as shown (Fig 3)
- 6. Replace top cover may require slight cut out as shown in (Fig 4)

RECOMMENDED ISOLATOR

DBE140SF or DBE180-SX Ensure, Before closing the bonnet that all items fitted have adequate clearance

Feb 2018