

Ford Ranger | Ford Everest 3.2L PX1 PX2 PX3 Turbo Diesel 2012-2018


OS-15-DON



Install Guide for Western Filters Pre-Filter Bracket Kit.

CAUTION: ** Ensure the engine is OFF & COOL before installation ! **

- 1: Identify Installation Area** Passenger's side of engine bay.
- 2: Apply Sealant to Head Fittings** using supplied sealant. allow 5mins to dry.
- 3: Mount Kit Bracket** to engine bay base.
- 4: Configure Head Assembly** As displayed.
- 5: Mount Pre-Filter** to Bracket.
- 6: Remove the Fuel Feed Line (FFL)** from between Fuel Filter and Tank.
- 7: Connect the Straight-End Kit Hose** to the Fuel Outlet and the Pre-Filter Inlet.
- 8: Connect the Kit Hose with Two 90° Ends** to the Pre-Filter's Outlet with the other end to the Factory Fuel Inlet.
- 9: Prime the Fuel System** Turn the ignition ON / OFF (without starting the car) several times to prime the system before starting the engine.

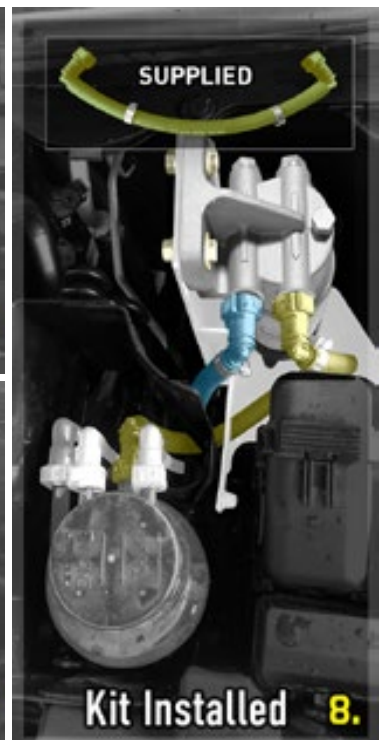

45-47 Forge St, Blacktown NSW 2148 | MON to FRI: 7:30am-5:00pm | SAT: 7:30am-12:00pm

Follow us on



westernfilters1

OS-15-DON