

Nissan Navara 2.3L ST NP300 2015-21 YD23 DOHC Di 16V



OS-17-DON-B



Install Guide for Western Filters Pre-Filter Bracket Kit.

CAUTION: ** Ensure the engine is OFF & COOL before installation ! **

- 1: Identify Installation Area** Passenger's side of engine bay.
- 2: Apply Sealant to Head Fittings** using supplied sealant. allow 5mins to dry.
- 3: Mount Kit Bracket** to engine bay base.
- 4: Configure Head Assembly** As displayed.
- 5: Fill Pre-Filter** with clean diesel before fitting to Bracket.
- 6: Disconnect the FUEL Feed Line** from the Fuel Filter.
- 7: Connect the FUEL Line** to the Pre-Filter Inlet.
- 8: Connect the Kit Hose** from the factory Filter to the Pre-Filter's Outlet
- 9: Prime the Fuel System** :: Release the Pre-Filter's Bleed Nut.
:: Pump the Fuel Filters Primer until Fuel bubbles appear around the Bleed Nut.
:: Re-tighten the Bleed Nut. Good to go !

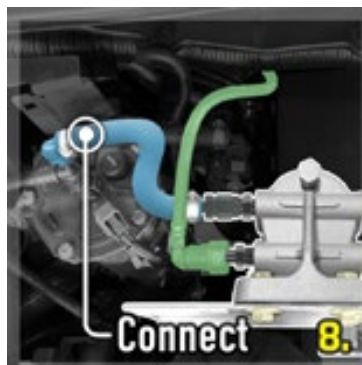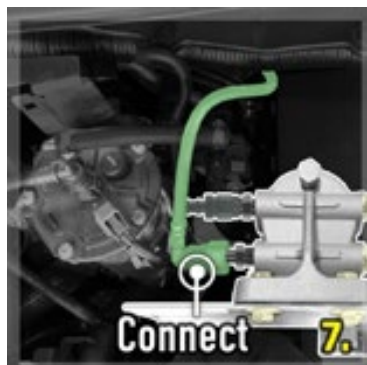

45-47 Forge St, Blacktown NSW 2148 | MON to FRI: 7:30am-5:00pm | SAT: 7:30am-12:00pm

Follow us on



westernfilters1

OS-17-DON-B