



MANN Provent 200 IV Oil Catch Can Kit Install Guide

CAUTION: ** Ensure the engine is OFF & COOL before installation ! **

STEP 1: Identify Install Area (Driver's side, below Power Steering reservoir).

STEP 2: Fit Bracket in Place (*ensure 10mm GAP between Brake Lines & Bracket*)

- Remove OEM Nut from studBolt near Brake Lines
- Place Kit Bracket over studBolt, return OEM Nut and tighten

STEP 3: Setup Provent Port Orientation and Add Drain Hose

- Unclip to release the Provent Plastic Bracket
- Swivel the Provent Catch Can in to position
- Fit Drain Hose to the Provent base drain, secure with the supplied clamp

STEP 4: Feed the Drain Hose down through the engine bay,

- Secure the DH inside the wheel arch with P-clamp & Cable-ties



WESTERN FILTERS

Provent Kit for Toyota LC Prado 250 Series 48 Volt 2024-on 2.8L TD MHEV 1GD-FTV OS-PROV-56

STEP 5: Fit Provent on to Kit Bracket using supplied fittings

ENSURE 10mm GAP between:

1. Brake Lines & Bracket
2. Provent and Bellow

STEP 6a: Disconnect the Air Hose from the Crankcase Outlet

STEP 6b: Reconnect Air Hose to Provent Bottom Hose to Air Hose
(previously connected to crankcase)

ENSURE 10mm GAP between:


3. Air Hose and Hose Sitting Above

STEP 7a: Connect Provent Top Hose to Crankcase Outlet.

STEP 7b: Return Engine Cover

STEP 8: Provent Kit installed. Dust off. Job done !

To View the Install Slide Presentation: [SCAN QR-CODE on page 1 >](#)

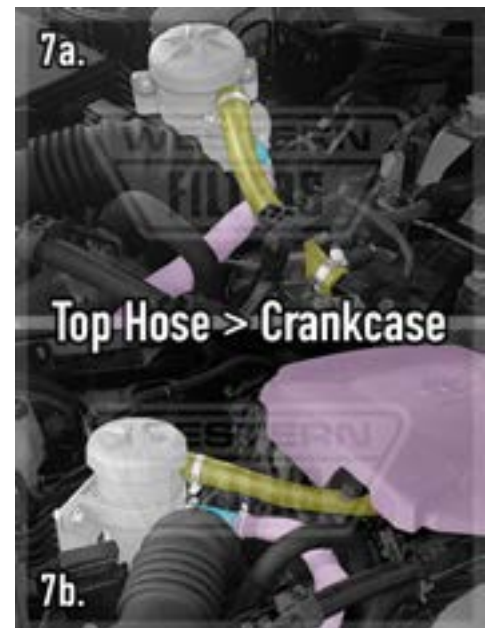

45-47 Forge St, Blacktown NSW 2148 | MON to FRI: 7:30am-5:00pm | SAT: 7:30am-12:00pm

Follow us on



westernfilters1

OS-PROV-56