

Ssangyong Musso 2022-on 2.2L E-XDI Turbo Diesel 148kW

OS-PROV-57



MANN Provent 200 IV Oil Catch Can Kit Install Guide


CAUTION: ** Ensure the engine is OFF & COOL before installation ! **

STEP 1: Fixing Points - re-use the factory OEM fittings (passenger's side of the engine bay). Feed the Drain Hose down thru into the Wheel Arch.

STEP 2: Unclip the Provent plastic bracket and swivel the ports into position. Attach the Drain Hose to Provent bottom outlet. Clamp securely. Secure the Drain Hose with P-Clamp. Insert the barbed end of the Tap and ENSURE the Tap is in the CLOSED position !

STEP 3: Fit the Provent Bracket over the OEM bolts and return all fittings.


STEP 4: Use the P-Clamp and Cable ties to secure the Drain Hose. Insert the Barbed end of the Tap. *** Ensure TAP is Closed ! ***

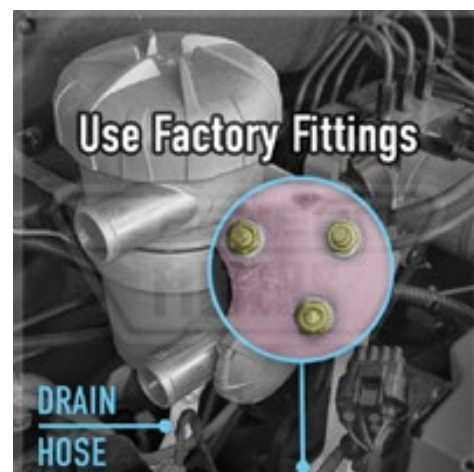


STEP 1:



STEP 2:

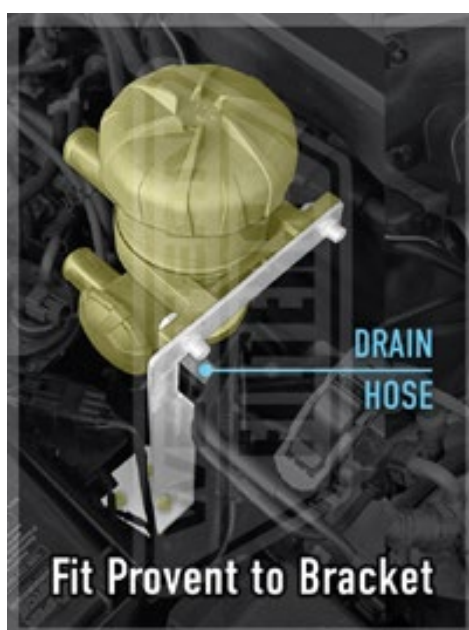

STEP 3:

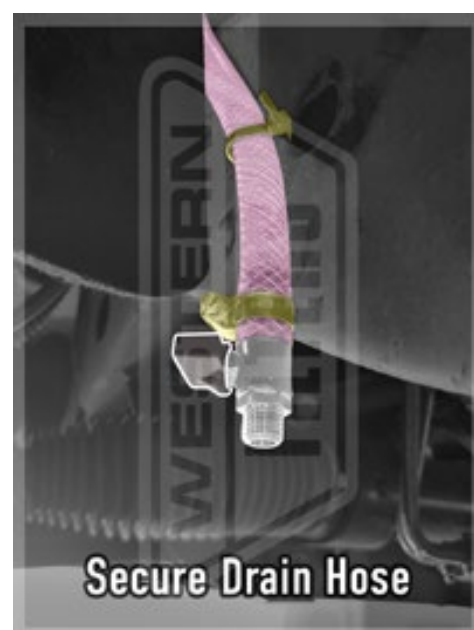

STEP 4:

45-47 Forge St, Blacktown NSW 2148 | MON to FRI: 7:30am-5:00pm | SAT: 7:30am-12:00pm

Follow us on



westernfilters1


OS-PROV-57

Ssangyong Musso 2022-on 2.2L E-XDI Turbo Diesel 148kW

OS-PROV-57

STEP 6: Connect the Lower Hose to Air Intake and clamp. Cable Tie to fix in place.**STEP 7:** Connect Top Hose to Crankcase and clamp. Cable Tie to fix in place.**STEP 8:** BEFORE: Air Intake & Crankcase Ports - Remove the Factory Air Hose**STEP 9:** AFTER: Air Intake Hose to Provent Lower Hose.
Provent Upper / Top Hose to Crankcase Outlet.**STEP 10:** Return the engine Cover. Job done ![View the Install Slide Presentation: SCAN QR-CODE on Pg1 >](#)***** IMPORTANT *****

Catch Can must be drained monthly to release accumulated buildup. Element replacement recommended every 40,000km.

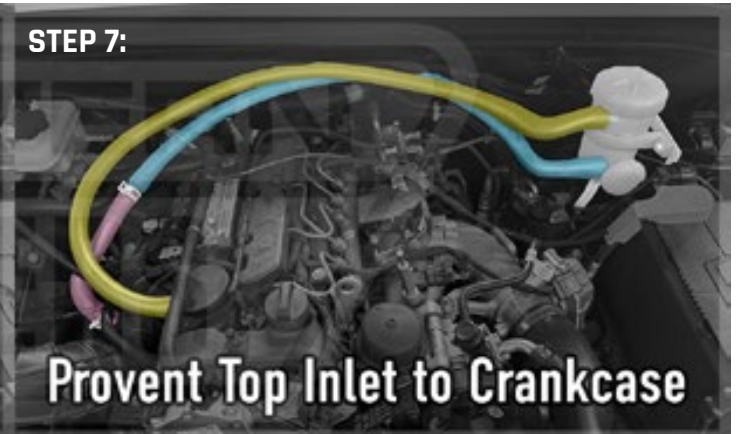STEP 6:**Air Hose to Provent Lower Outlet****STEP 7:****Provent Top Inlet to Crankcase****STEP 8:****Remove OEM Breather Hose****STEP 9:****Connect Hoses To Ports****STEP 10:****Return Cover
Kit Installed !****DRAIN
HOSE**