

2025-on GWM Cannon Alpha 2.4L Turbo Diesel 4X4

OS-PROV-58

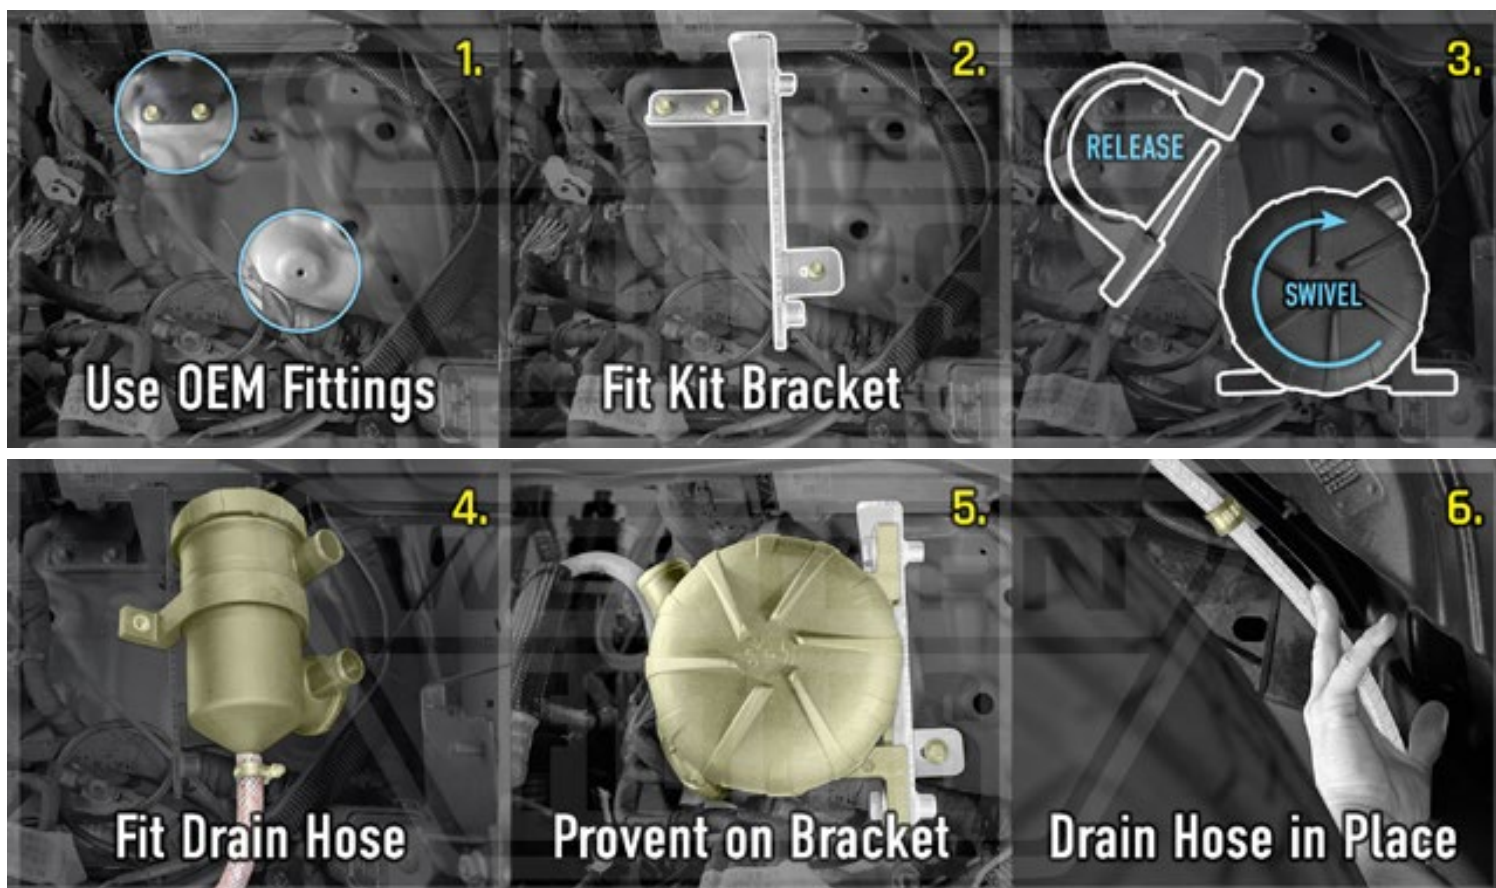


WARNING: Engine damage will occur if incorrectly connected. Please follow Installation Guide
For vehicles that have travelled over 80,000 kms we recommend an intake manifold clean !

MANN Provent 200 IV Oil Catch Can Kit Install Guide

CAUTION: ** Ensure the engine is OFF & COOL before installation ! **

- 1: Use the factory fitting points on the passenger's side of the engine bay.
- 2: Place the Provent Bracket, use the factory bolts and screw hole to secure.
- 3: Unclip the Provent plastic bracket and swivel the ports into position.
- 4: Attach the Drain Hose to Provent bottom outlet. Clamp securely.
- 5: Fit the Provent 200 to the Kit Bracket.
- 6: Feed the Drain Hose down thru into the Wheel Arch.

1. Use OEM Fittings

2. Fit Kit Bracket

3. RELEASE SWIVEL

4. Fit Drain Hose

5. Provent on Bracket

6. Drain Hose in Place

45-47 Forge St, Blacktown NSW 2148 | MON to FRI: 7:30am-5:00pm | SAT: 7:30am-12:00pm

Follow us on



westernfilters1

OS-PROV-58

2025-on GWM Cannon Alpha 2.4L Turbo Diesel 4X4

OS-PROV-58

- 7: Feed the Drain Hose around the Wheel Arch and secure with P-Clamp.
- 8: Add the clamp to hose, insert the barbed end of the Tap. Ensure it's CLOSED!
- 9: Disconnect the Air Hose from the Crankcase.
- 10: Connect the Air Hose to the Kit's Long Hose and the Provent's Lower Outlet.
- 11: Fit the Kit 90° Hose Bend to the Crankcase.
Connect to the Kit's Short Hose to the Provent Top Inlet. Clamp.
- 12: Check and tighten all clamps.
Fix with Cable-ties. Return the engine Cover. Job done !

***** IMPORTANT *****

Catch Can must be drained monthly to release accumulated buildup. Element replacement recommended every 40,000km.

